

Dual Pushbuttons (without Pilot Light)

Specify a button color code in place of [2] and legend code in place of [3] in the Part No.

Package Quantity: 1

Shape	HW7D								
	Operation	Button Style	Contact		Part No.		[2] Button Color Code	[3] Legend Code	
Momentary	Flush (top) Flush (bottom)	1NO	1NC	HW7D-B111001	[2] [3]	GR: Green (top) Red (bottom) WB: White (top) Black (bottom)	Blank: Without legend 1: I / ON (top) 0 / OFF (bottom)		
		1NO	1NO	HW7D-B111010	[2] [3]				
		1NO-1NC	1NO-1NC	HW7D-B111111	[2] [3]				
		2NO	2NC	HW7D-B112002	[2] [3]				
	Flush (top) Extended (bottom)	1NO	1NC	HW7D-B121001	[2] [3]				
		1NO	1NO	HW7D-B121010	[2] [3]				
		1NO-1NC	1NO-1NC	HW7D-B121111	[2] [3]				
		2NO	2NC	HW7D-B122002	[2] [3]				
		Interlock (*1)	Flush (top) Flush (bottom)	1NO	1NC			HW7D-B211001	[2] [3]
				1NO	1NO			HW7D-B211010	[2] [3]
Flush (top) Extended (bottom)	1NO		1NC	HW7D-B221001	[2] [3]				
	1NO		1NO	HW7D-B221010	[2] [3]				
		1NO-1NC	1NO-1NC	HW7D-B221111	[2] [3]				
		2NO	2NC	HW7D-B222002	[2] [3]				

• See B-202 for top and bottom button contact mounting positions.

*1) Interlock: Momentary operation. When one of the buttons is pressed, the other button cannot be operated.

Do not operate top and bottom buttons at the same time. Operating the buttons at the same time may lead to malfunctions.