
SDP-04

DIGITAL POSITION INDICATORS

R⊕∺S SPATE OF SDP-04H (Style H)

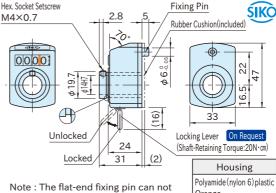

(Style F)



SDP-04V (Style V)

SDP-04A (Style A)

work to mark a fixing point.

Orange Black(on request) Gray (on request)

Features

- · Lightweight and compact
- · Using a shaft sleeve allows accepting a shaft of 6mm, 8mm, 10mm or 12mm diameter.
- · The locking lever(on request) prevents the shaft from rotating due to vibrations from the machine (SKP-04 SKPZN04 Clamp Plates can also be used for the same purpose).
- · Displayed figure height: 6mm

Furnished With

·Comes with a rubber cushion


Technical Information

Working temperature: Up to 80°C

How To Use

- 1 Stick the rubber cushion to the back of the indicator. Do not stick it when using the housing seal.
- 2 Drill a fixing-pin hole in the mounting wall, 22mm above the shaft center.
- 3 Slide the indicator onto the shaft to the mounting wall and then tighten the setscrew.


■Display Example

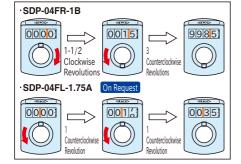

Notes

- Ensure that the start-up revolution speed is 1/3 or less of the allowable revolution speed.
- Do not give rapid acceleration or sudden stop.
- These position indicators can not be used in applications where the shaft moves in the axial direction.
- · The rubber cushion and the housing seal SDP-04-HS can not be used together.

 ■Application Example



Housing seal & Front seal (to be ordered separately)

