
SDP-08

DIGITAL POSITION INDICATORS

[R⊕\S]





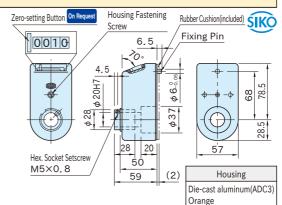

Features


(Style H)

- ·Reversible rotative direction
- · Long distance between the shaft-hole and fixing-pin centers.
- ·Using a shaft sleeve allows accepting a shaft of 12mm, 14mm, 15mm or 16mm diameter.
- ·Displayed figure height: 4.5mm

Furnished With

Rubber Cushion


How To Use

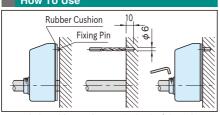

- Stick the rubber cushion to the back of the indicator.
 Slide the indicator onto the shaft to the mounting wall to
- mark a point for a fixing-pin hole with the fixing pin.

 3 Drill a fixing-pin hole at the marked position.
- 4 Slide the indicator onto the shaft to the mounting wall again and then tighten the setscrew.

How to Reverse Rotative Direction

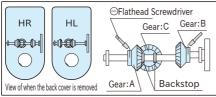

- ·Remove the back cover.
- ·Unfasten Gears A and B using a flathead screwdriver, and then get Gear A disengaged from Gear C.
- •Move Gear B to the backstop to get it engaged with Gear C


Notes

- •Ensure that the start-up revolution speed is 1/3 or less of the allowable revolution speed.
- ·Do not give rapid acceleration or sudden stop.
- •These position indicators can not be used in applications where the shaft moves in the axial direction.

Technical Information

Working temperature: Up to 80°C

Application Example

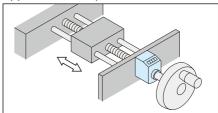

Display Example

