
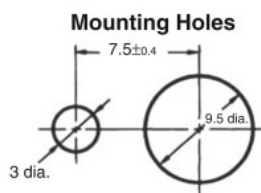


External Adjuster


G32A-E-VR

The external adjuster, its adjuster knob, and its nameplate, all come in a set (G32A-E-VR).

External Adjuster (50 kΩ, B Characteristic)

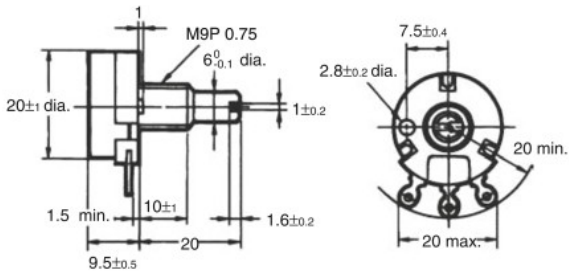


When wiring, connect in the way shown below.

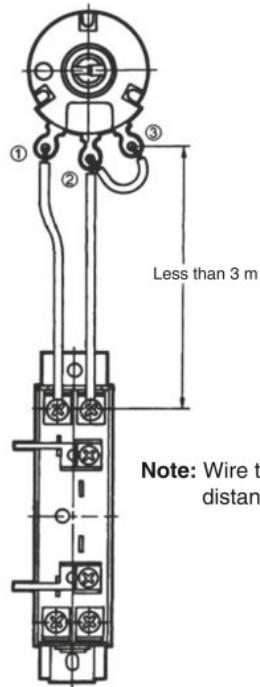

Note: Wire the external adjuster at a distance of less than 3 m.

Nameplate

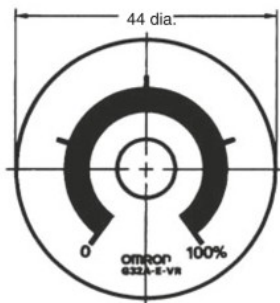

Note: When using the external adjuster for input, be sure to set the input selection slide switches accordingly.

Knob

