

# Track/Surface Mounting Sockets P2RF-05-PU

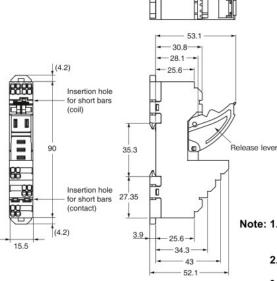



Terminal Arrangement/ Internal Connection Diagram (Top View)

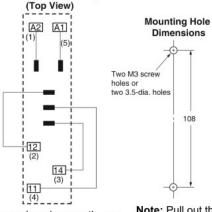


Note: 1. The numbers in parentheses are traditionally used terminal numbers.

Insert the short bar into only the A1 or A2 side.


 Contact terminal crossover will result in functionality only on the No. 11 terminal side. The insertion hole on the No. 14 terminal side is a dummy hole for installing a short bar without bending the pins. Note: Pull out the hooks to mount the Socket with screws.

#### P2RF-08-PU



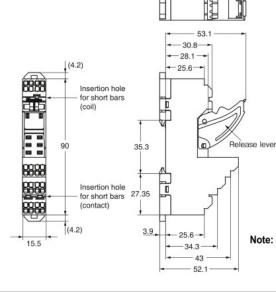

#### Terminal Arrangement/ Internal Connection Diagram

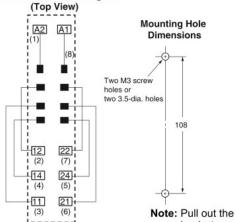


Note: 1. The numbers in parentheses are traditionally used terminal numbers.


2. Insert the short bar into only the A1 or A2 side.

hooks to mount the Socket with screws.

### Accessories for P2RF-□-PU Short Bars PYDN-7.75-□□ (7.75 mm)

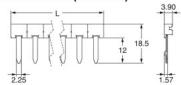

## PYDN-15.5-080□ (15.5 mm)

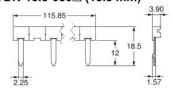

Application	Pitch	No. of poles	L (Length)	Colors	Model *	Maximum carry curren
For Contact terminals (common)	7.75 mm	2	15.1	Red (R) Blue (S) Yellow (Y)	PYDN-7.75-020□	20 A
		3	22.85		PYDN-7.75-030□	
		4	30.6		PYDN-7.75-040□	
		20	154.6		PYDN-7.75-200□	
For Coil terminals	15.5 mm	8	115.85		PYDN-15.5-080□	

\*Replace the box ( $\square$ ) in the model number with the code for the covering color.

Note: 1. Use the Short Bars for crossover wiring within one Socket or between Sockets.

When using short bar to coil terminals of PYF-□□-PU, make sure to use PYDN-31.0-080□ (31 mm).

When using short bar to coil terminals of P2RF- $\square$ -PU, make sure to use PYDN-15.5-080 $\square$  (15.5 mm).