 




# SV Type (7° Relief)

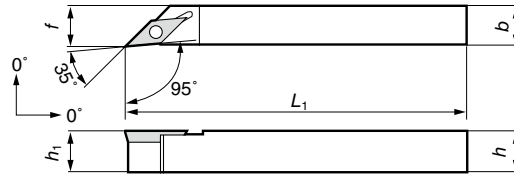

## General Turning and Copying

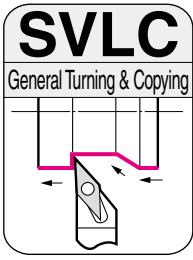

### Holder



Above figures show right hand tools.

Cat. No.	Stock		Dimensions (mm)					Applicable Insert
	R	L	h	b	L <sub>1</sub>	f	h <sub>1</sub>	
SVLC R/L1010-H11	●	●	10	10	100	10.5	10	VC□□1103
SVLC R/L1212-H11	●	●	12	12	100	12.5	12	VC□□1103
SVLC R/L1616-H11	●	●	16	16	100	16.5	16	VC□□1103
SVLC R/L2020-K11*	●	●	20	20	125	20.5	20	VC□□1103

### Parts

Screw	(For Torx Holes) Wrench
BFTX02508NV	TRX08
Recommended Tightening Torque (N·m)	
<b>1.5</b>	

\* Previous Cat. No SVLCR/L2020-H11

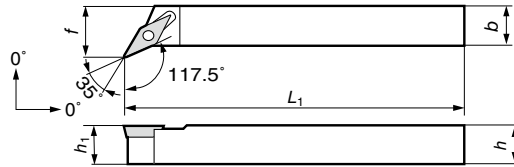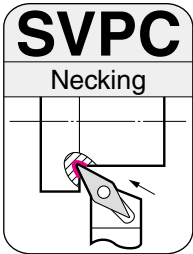

### Holder

Above figures show right hand tools.

Cat. No.	Stock		Dimensions (mm)					Applicable Insert
	R	L	h	b	L <sub>1</sub>	f	h <sub>1</sub>	
SVPC R/L1010-H11	●	●	10	10	100	14.5	10	VC□□1103
SVPC R/L1212-H11	●	●	12	12	100	16.5	12	VC□□1103
SVPC R/L1616-H11	●	●	16	16	100	20.5	16	VC□□1103
SVPC R/L2020-K11*	●	●	20	20	125	24.5	20	VC□□1103

### Parts

Screw	(For Torx Holes) Wrench
BFTX02508NV	TRX08
Recommended Tightening Torque (N·m)	
<b>1.5</b>	

\* Previous Cat. No SVLCR/L2020-H11