

Wheels used in J2 SERIES

Product number	Wheels						
		Wheel diameter (mm)	Boss width (mm)	Wheel width (mm)	Hole diameter (mm)	Allowance load daN(kgf)	
W-	130 φ 12	Rubber wheel with steel plate wheel assembly (including B)	130	55	40	12	180(183.6)
	150 φ 12	Rubber wheel with steel plate wheel assembly (including B)	150	55	40	12	200(204.0)
NR-	130	Rubber wheel with nylon wheel assembly (including B)	130	55	40	12	180(183.6)
	150	Rubber wheel with nylon wheel assembly (including B)	150	55	40	12	200(204.0)
N-	130 φ 12 (equipped with cover)	Nylon wheel (including B)	130	56	40	12	180(183.6)
	150 φ 12 (equipped with cover)		150	56	40	12	200(204.0)
GU-	130 φ 12	Urethane wheel with nylon wheel assembly (including B)	130	55	40	12	180(183.6)
	150 φ 12		150	55	40	12	200(204.0)

*(Equipped with cover) = Bearing cover type
 * Allowable load indicates allowable load only for wheels.




NWR
 Rubber wheel with nylon wheel assembly (including B)

Wheels used in RJ2 SERIES

Product number	Wheels	Wheel diameter (mm)	Boss width (mm)	Wheel width (mm)	Hole diameter (mm)	Allowance load daN(kgf)	
NWR-	150 φ 12	Rubber wheel with nylon wheel assembly (including B)	150	56	34	12	160(163.2)

* Allowable load indicates allowable load only for wheels.

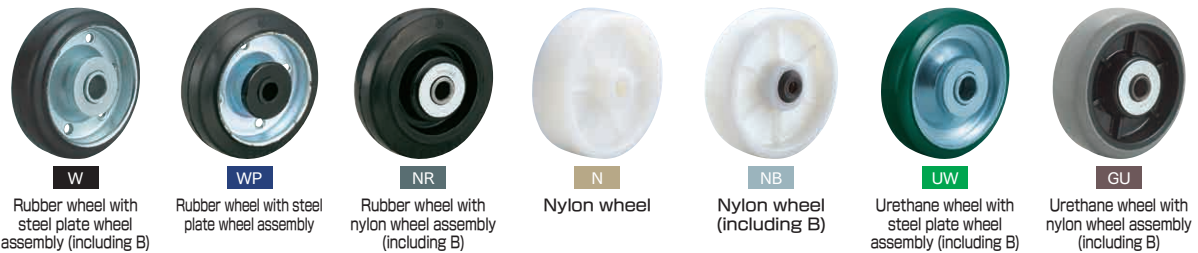

Wheels used in SJ SERIES

Product number	Wheels	Wheel diameter	Boss width	Wheel width	Hole diameter	Allowance load	
		(mm)	(mm)	(mm)	(mm)	daN(kgf)	
W-	100	Rubber wheel with steel plate wheel assembly (including B)	100	42	32	12	100(102.0)
	125		125	42	32	12	120(122.4)
WP-	100	Rubber wheel with steel plate wheel assembly	100	42	32	12.2	100(102.0)
	125		125	42	32	12.2	120(122.4)
NR-	100	Rubber wheel with nylon wheel assembly (including B)	100	42	32	12	100(102.0)
N-	100	Nylon wheel	100	42	32	12.2	100(102.0)
NB-	100	Nylon wheel (equipped with cover)	100	43	32	12	100(102.0)
UW-	100	Urethane wheel with steel plate wheel assembly (including B)	100	42	32	12	180(183.6)
GU-	100	Urethane wheel with nylon wheel assembly (including B)	100	42	32	12	100(102.0)
	125		125	42	32	12	120(122.4)

*(Equipped with cover) = Bearing cover type
 * Allowable load indicates allowable load only for wheels.

*(including B) indicates wheels equipped with bearing.

- J
- PM
- J2
- RJ2
- SJ
- S
- E
- G
- L
- SA
- H
- CAL-H
- M
- PL
- Silence
- SUS-J2
- SUS-SJ
- SUS-S
- SUS-E
- SUS-H
- P
- SKY
- Equipped with adjuster foot
- Special
- Easy lock
- Wheels