
Vacuum Filters



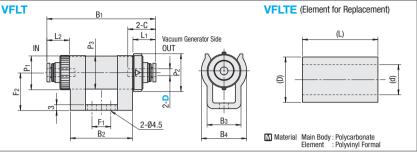


Part Num		B ₁	Вa	Вз	B ₄	L ₁	La	D₁	Da	Do	C	E₁	Fa	Filtration Area (cm²)	Mass	Unit Price	
Type	D	D.	DZ	Do	D4				1 2	13			1 2	Area (cm²)	(g)	1 ~ 9 pc(s).	10~20
VFLT	4	58	22	10	24	11.9	11.9	10 2	20	175	14.9	10	20	7.5	18		
VFLI	6	60	33	10	24	13	13	18.2	. 20	17.5	16	16	20	7.5	19		


Part	(D)	(d)	/L \	Unit Price	Volume Discount Rate
Number	נט)	(u)	(L)	1 ~ 9 pc(s).	10~20
VFLTE	12	8	20		

VFSE (Element for Replacement)

(L)

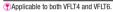



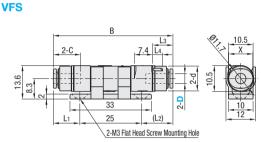

Part Num		В	C	L ₁	(L2)	Lз	L4	Ч	Y	Element				Volume Discount Rate
Type	D)		(=2)	Lo		u	_^_	Length	Area (cm²)	(g)	1 ~ 9 pc(s).	10~20
VFS	4	48.5	11	10.8	12.7	8.2	4	10	9.8	15	2.8	5.1		
VFS	6	53.4	11.6	13.2	15.2	10.6	4.5	10.5	11.8	10	2.0	6		

Part Number	(D) (d)		(L)	Unit Price 1 ~ 9 pc(s).	Volume Discount Rate	
VFSE	6	4	15			










Plumbing Example

Plumbing between Vacuum Generator and Vacuum Pad removes dusts entering from pad and protects Generator from failures.

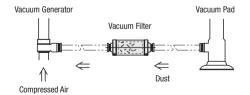

Specifications

Applicable Fluid	Air
Operating Temperature Range	0~60°C
Operating Pressure Range	-100~0kPa
Filtration Accuracy	5μm

i Element Replacement

■How to Remove

2 Pull out plastic body B.


* Do not turn the plastic body B beyond 45°. It may damage the plastic body.


How to Lock 1)Turn plastic body B 45° counterclockwise*.

- 1) Press-fit plastic body B completely to plastic body A. Be sure that the lug of plastic body A aligns with the key slot in plastic body B.

 ②Turn plastic body B 45° clockwise *1 to lock.

 *1.Do not turn the plastic body B beyond 45°. It may
- damage the plastic body.
- When locking, be sure that the lug of plastic body A comes to the center of the hole in plastic body B.

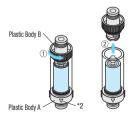

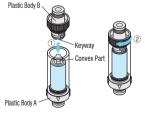

Be sure that the vacuum generator is installed in the same direction as pointed by the \triangle mark If installed reversely, the element inside will become dirty, making it impossible to know the proper time for maintenance.