


# B-200

Kitagawa  
Hydraulic / Air Chuck

"KITAGAWA"  
Size chart.

Steel  
Soft Jaw.

MADE IN JAPAN

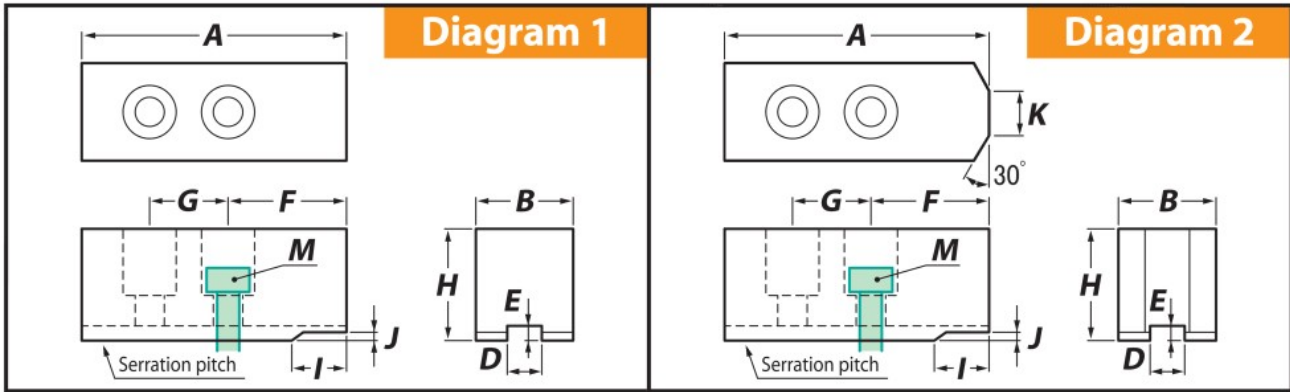

ARM	Item No.	A	B	H	D	E	F	G	M	I	J	K	Serration pitch	Diagram		
B	204	H23	49.5	23	10	4	25.5	14	M8	7.5	1.5	4	1.5	2		
		H40													23	40
	205	H25	54	23	10	4	28	14	M8	7.5	1.5	5	1.5	2		
		H40													25	40
		H60													60	60
	206	H28	66	26	12	5	34	20	M10	12	1.5	5	1.5	2		
		H40													28	40
		H60													60	60
	208	When the Chuck number is B-208, Soft Jaw HO-8 should be used.														
	210	When the Chuck number is B-210, Soft Jaw HO-10 should be used.														
212	H50	111	50	21	4	60	30	M16	20	1.5	-	1.5	1			
	H90													50	90	
	H120													90	120	
215	When the Chuck number is B-215, Soft Jaw N-15/18 should be used.															

B-204, B-205, B-206, these Jaw has Aluminium series.


# B-200 for small diameter work

Kitagawa  
Hydraulic / Air Chuck

"KITAGAWA"  
Size chart.

Steel  
Soft Jaw.

MADE IN JAPAN

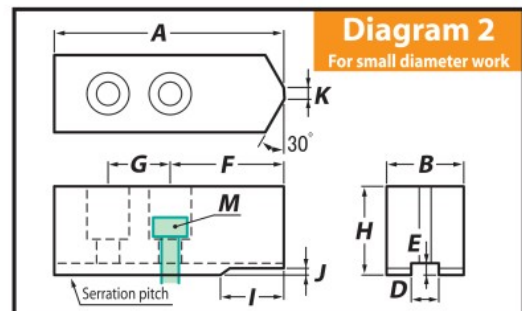

ARM	Item No.	A	B	H	D	E	F	G	M	I	J	K	Serration pitch	Diagram
B-208	When the Chuck number is B-208, specialised for small diameter work, Soft Jaw HO-8S should be used.													
B-210	When the Chuck number is B-210, specialised for small diameter work, Soft Jaw HO-10S should be used.													
B-212S	H50	144	50	21	4	93	30	M16	53	1.5	8	1.5	2	
	H90													50