
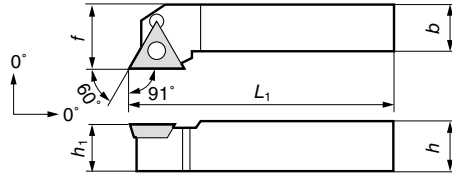


## External Turning

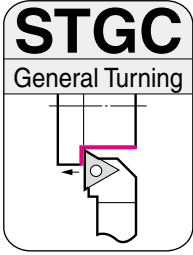



■ Holder

Above figures show right hand tools.

Cat. No.	Stock		Dimensions (mm)					Applicable Insert	Screw	Recommended Tightening Torque (N·m)	Wrench
	R	L	h	b	L <sub>1</sub>	f	h <sub>1</sub>				
STGC R/L0808-09	●		8	8	100	10	8	TC□□0902	BFTX02205N	0.5	TRX06
STGC R/L1010-09	●	●	10	10	100	12	10	TC□□0902			
STGC R/L1212-11	●	●	12	12	100	16	12	TC□□1102	BFTX02506N	1.5	TRX08
STGC R/L1616-11	●	●	16	16	100	20	16	TC□□1102			
STGC R/L2020-11	●	●	20	20	125	25	20	TC□□1102			

■ Parts

	(For Torx Holes)

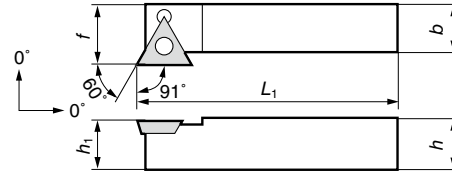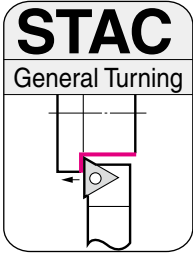

■ Holder

Above figures show right hand tools.

Cat. No.	Stock		Dimensions (mm)					Applicable Insert	Screw	Recommended Tightening Torque (N·m)	Wrench
	R	L	h	b	L <sub>1</sub>	f	h <sub>1</sub>				
STAC R/L0808-09		●	8	8	100	8.5	8	TC□□0902	BFTX02205N	0.5	TRX06
STAC R/L1010-09	●		10	10	100	10.5	10	TC□□0902			
STAC R/L1212-11	●	●	12	12	100	12.5	12	TC□□1102	BFTX02506N	1.5	TRX08
STAC R/L1616-11	●	●	16	16	100	16.5	16	TC□□1102			
STAC R/L2020-11	●	●	20	20	125	20.5	20	TC□□1102			

■ Parts

	(For Torx Holes)